


Traverse climbing wall - Protective curtain

The installation

- 1) At first: The two top corners lag screw eyes must be installed at 86" from the ground and 1" from the side of your wall
- 2) Using a 1/4" drill bit, drill a hole where the lag screw eyes will be installed. Then screw on the lag screw eyes (using also the include washers).
- 3) Insert one quick link #1 into the grommet located at each top corners of the canvas. Quick links #2 go through the quick link inserted in the grommet.
- 4) Insert quick links #2 over the top corner lag screw eyes.
- 5) With the 2 lag screw eyes, using a chalk line or a thin rope, make a straight line at 86" from the floor.
- 6) With the 2 lag screw eyes already installed, hold the curtain against the wall. You need to mark your wall, in order to install your other lag screw eyes. The marks for the top lag screw eyes should be at approximately every 8', on the 86 " high line, aligned with the safety curtain grommets.
- 7) For the bottom lag screw eyes, Using a chalk line, make a straight line 2 " under the curtain
- 8) The marks for the bottom lag screw eyes should be aligned with the top lag screw eyes marks at approximately every 8', on the 2 " line UNDER THE CURTAIN.
- 9) Take the curtain off the wall and pre-drill every mark.
- 10) To lock the curtain, pass the wired cable through all the lag screw eyes and install the padlock at the end

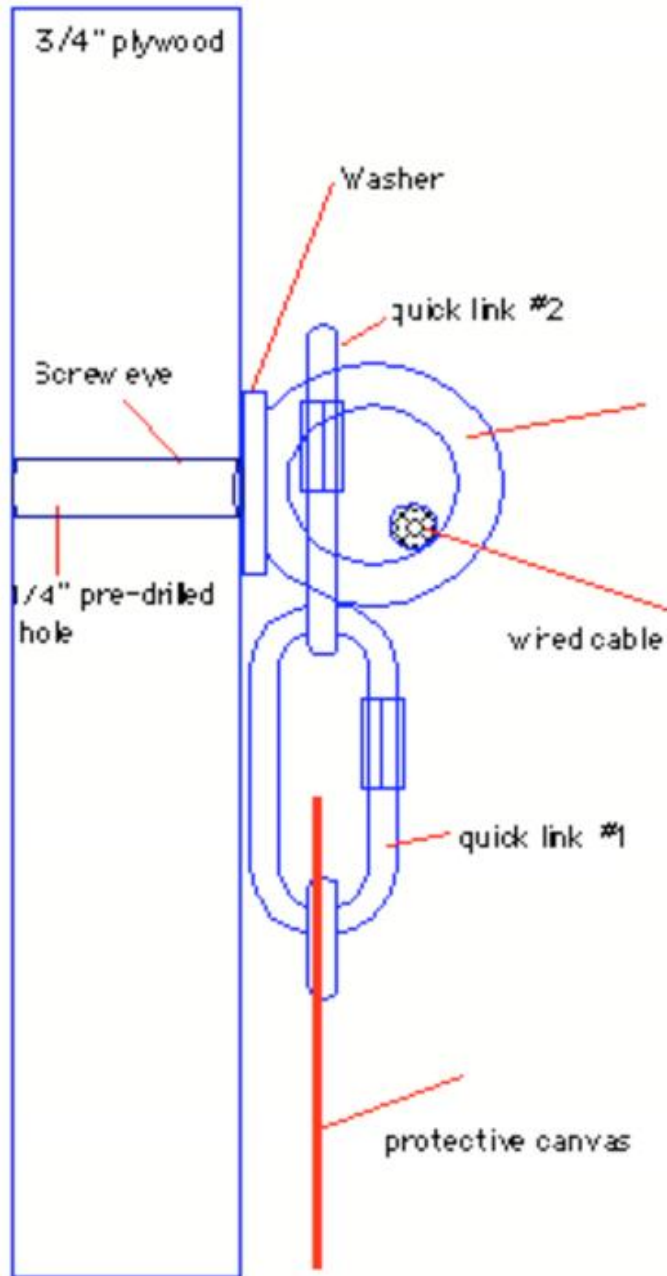

Questions?

1-651-209-0660 or service@pmclimbingsystems.com